


DETAIL 1. CONTRACTION JOINTS (ALSO CALLED SAW CUTS/CONTROL JOINTS.)

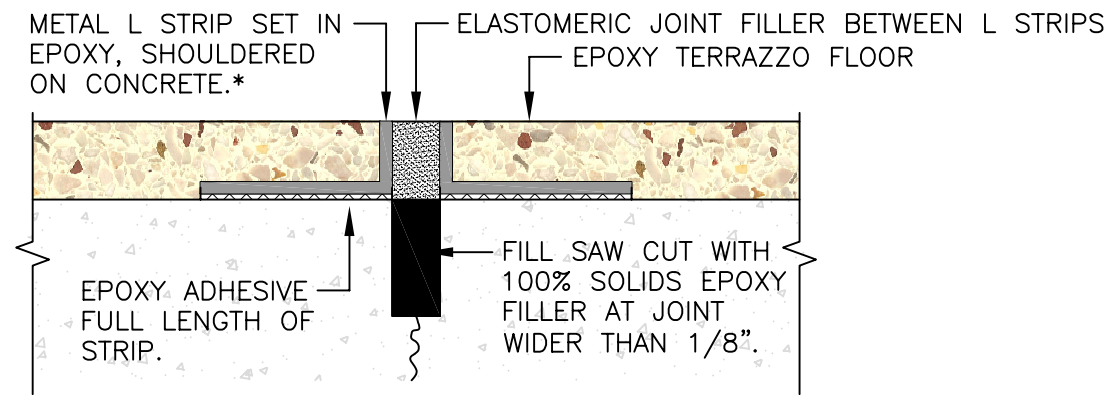

SCALE: FULL SCALE

04/09

OPTION: FOR "ART WORK AREAS". SEE BURIED CONTRACTION JOINT. REFER TO DETAIL 3.

*CARE SHOULD BE TAKEN BY CONCRETE CONTRACTOR TO PROVIDE A STRAIGHT JOINT, PLACED IN COORDINATION WITH DESIGN TEAMS CONSIDERATION OF FINAL GRID PATTERN. SQUARE EDGES ENCOURAGED. TOOLED EDGES DISCOURAGED.

**THIS DETAIL MUST BE USED FOR RADIANT HEATED FLOORS.